


# RO★244-2



Reparaturanleitung | Repair instructions | Manuel de réparation

## ROE71752

- ① D Sicherung
- ② GB Locking device
- ③ F Sécurité

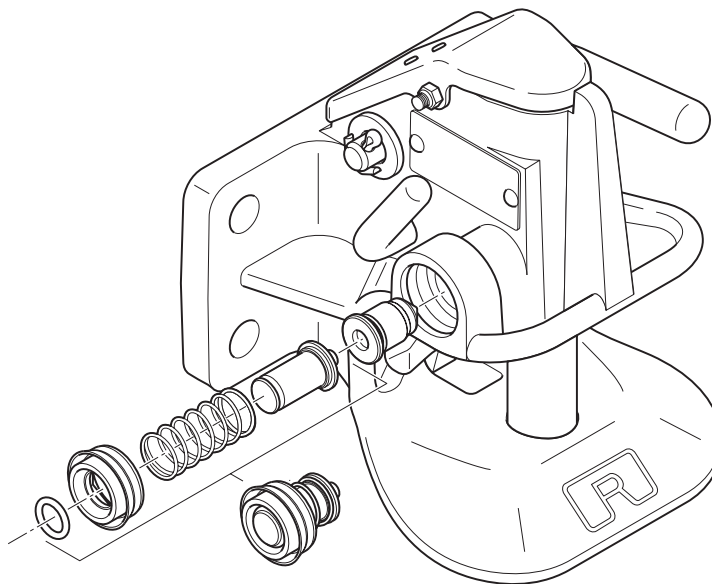

## Liability

ROCKINGER assumes no guarantee for the completeness and correctness of the information. The contents of the instructions cannot be used to substantiate any claims. In particular, no liability is assumed for damages which are the result of incorrect repair or maintenance work.

## Copyright

All the rights to these instructions and their annexes remain with ROCKINGER.

## Emphasis in the text

### Explanation of symbols

For ease of readability and to provide a clear overview, different types of information are marked in different ways.

Sentences introduced with an arrow contain instructions to perform certain actions:

- Carry out instructions one after the other in the sequence described.

The following information is introduced by a dash:

- Lists
- Preconditions for actions to be executed subsequently
- Descriptions of previous work steps
- Descriptions of statuses

### Warnings of hazards and risks

Important passages which must be observed, are especially emphasised:



#### DANGER!

Warns against immediate dangers which could lead to serious injury or death.

- Provides instructions for defence against or avoidance of dangers.

**WARNING!**

Warns against risks which could lead to serious injury or death.

- Demands safety measures to protect the persons concerned.

 
**CAUTION!**

Warns against risks which could lead to damage to property or personal injury (light injury).

- Provides information for prevention of damage.

**Illustrations**


As necessary, texts are illustrated by pictures. The reference to a figure is made with a number in [square brackets]. Capital letters after a figure number, e.g. [12A] refer to the corresponding position in the picture.

**Binding information****LUBRICANTS:**

- Lubricant for the previously described activity

**Supplementary information**

 The information symbol refers to instructions and recommendations as well as additional information.

**TOOLS:**

- List of the tools necessary for the subsequently described activities.

# 1.1 Locking device

## Locking device

### Requirements


- Coupling closed

### TOOLS:

- Vice-grip wrench
- Screwdriver
- Plastic hammer
- Assembly plug, part no. ROE84001

### Removal

- Press the hand lever [1A] slightly upwards and hold it there so that the control pin [1B] is protruding slightly

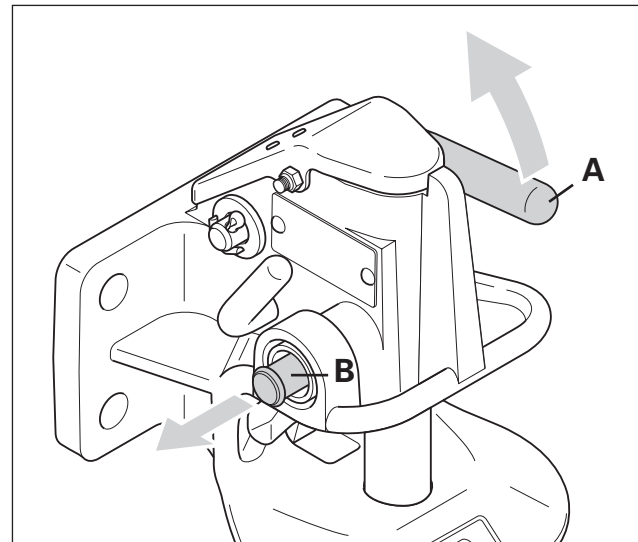


- [1] **A** Hand lever  
**B** Control pin

- Grip the control pin with the vice grips and lever out the locking device [2A]

**NOTE:**

This will necessarily destroy both the control pin and the plastic sleeve [3A].  
Spare Part Complete locking device  
no. ROE 71752

- Use the screwdriver to lever out the locking bolt [3B]

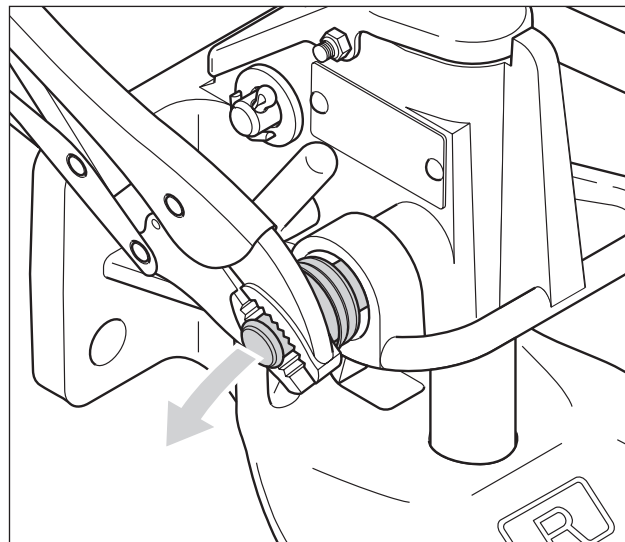


[2] **A** Lever out locking device with vice grips.

## 1.2 Locking device

### Locking device

#### Installation

- Thoroughly clean and grease the exposed parts of the housing boring
- The installation takes place with a complete new locking device set, Spare part Complete locking device no. ROE 71752
- Stick the control pin [3C] through the spring [3D] and the plastic sleeve [3A] and use the O-ring [3E] to secure against falling out
- Grease the locking bolt [3B] and slide it into the boring
- Grease the assembled locking device [3F] around the area of the spring and slide it into the slide to the end, making sure that it is correctly centred

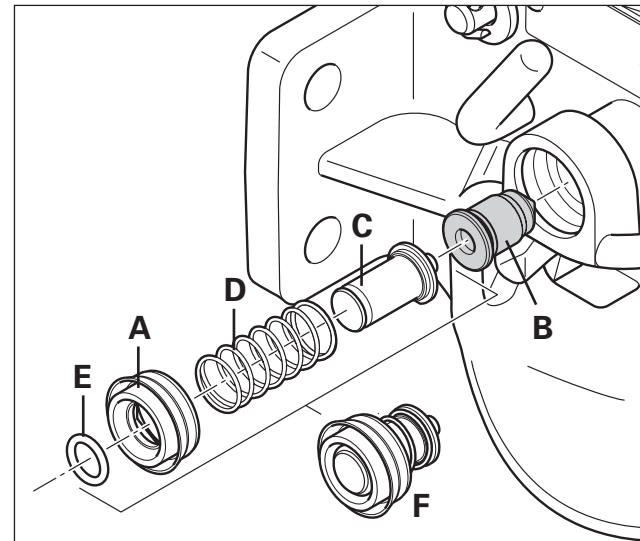


- [3] **A** Plastic sleeve  
**B** Locking bolt  
**C** Control pin  
**D** Spring  
**E** O-ring  
**F** Assembled locking device

- Place the assembly pin [4A] in position and bang the locking device [4B] in until it is flush with the edge of the housing [5]
- Check the coupling for correct functioning; Section 2.1

**LUBRICANTS:**

- Special grease ROE96040

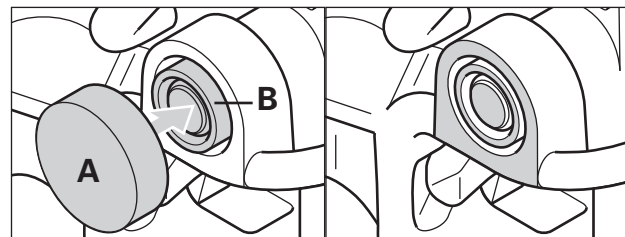

- [4] **A** Assembly pin, part no. ROE84001 included in the delivery  
**B** locking device

- [5] Locking device flush with the edge of the housing

## 2.1 Function check

### Function check

#### Procedure


- Press the hand lever [6A] upwards until it engages
- The control pin [6B] must now be clearly projecting (12 mm)
- Press the closing lever [7A] down all the way.
- The control pin [7B] should now be no longer projecting



#### NOTE!


If the control pin is still projecting when the coupling is closed [8A]

- Replace the locking device, Section 1.1
- Replace the locking lever;  
Repair instructions RO\*244-2  
[www.jost-world.com](http://www.jost-world.com)

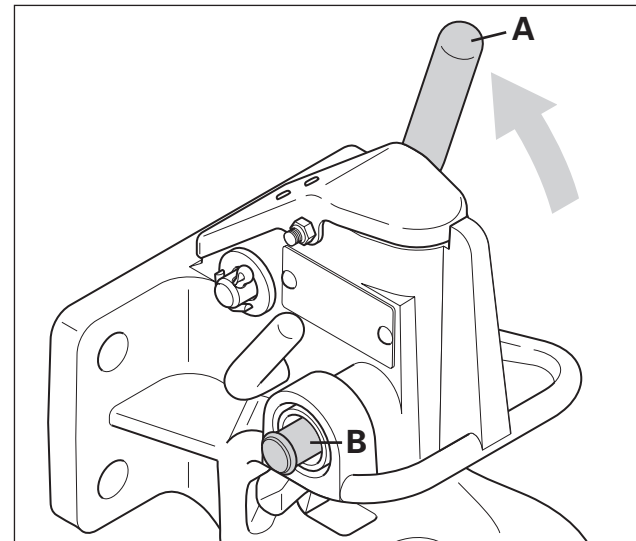


[6] **A** Hand lever  
**B** Control pin



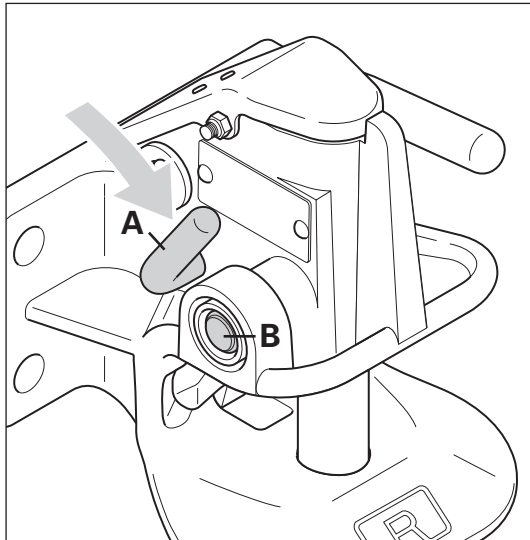

[7] **A** Closing lever  
**B** Control pin

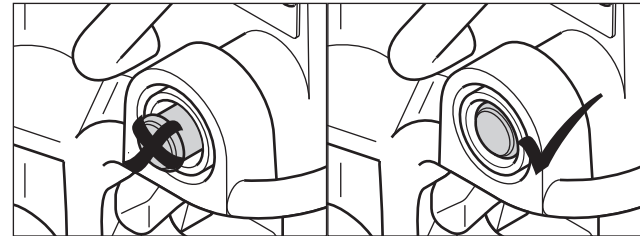

[8] **A** Wrong

[8] **B** Correct

Control pin in closed position



Technische Änderungen vorbehalten.  
Aktuelle Informationen finden Sie unter:  
[www.jost-world.com](http://www.jost-world.com)

Technical modifications reserved.  
For up-to-date information, please visit:  
[www.jost-world.com](http://www.jost-world.com)

Sous réserve de modifications techniques.  
Vous trouverez des informations mises à  
jour sur le site :  
[www.jost-world.com](http://www.jost-world.com)

JOST-Werke  
Siemensstr. 2  
D-63263 Neu-Isenburg  
Telefon +49(0)61 02295- 0  
Fax +49(0)61 02295-298  
[www.jost-world.com](http://www.jost-world.com)