


RO★50 BNA

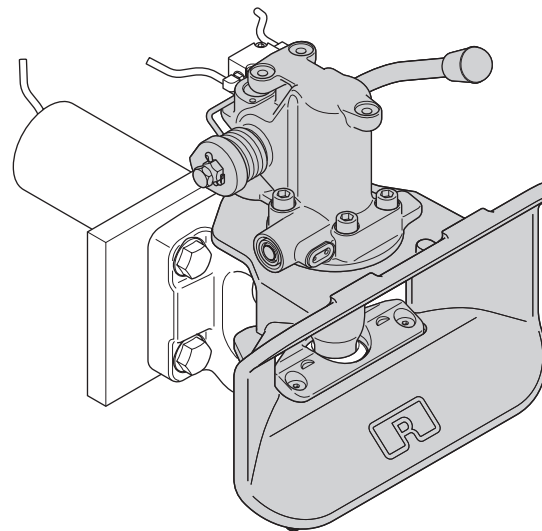

Reparaturanleitung | Repair instructions | Manuel de réparation | Instrukcja naprawy

- Ⓓ Automatischeinheit, Fangmaul
- ⒼⒸ Automatic unit, Funnel
- Ⓕ Unité automatique, Pavillon
- ⒽⒶ Zespół automatyki,
Szczęka wprowadzająca



(D)	Allgemeines	3	(F)	Généralités	33
	1. Automatiqueinheit	5		1. Unité automatique	35
	2. Fangmaul	9		2. Pavillon	39
	3. Funktionsprüfung	16		3. Essai de fonctionnement	46
(GB)	General	18	(PL)	Informacje ogólne	48
	1. Automatic unit	20		1. Zespół automatyki	50
	2. Funnel	24		2. Szczeka wprowadzająca	54
	3. Function test	31		3. Kontrola działania	61

Liability

ROCKINGER assumes no guarantee for the completeness and correctness of the information. No claims can be derived from the contents of the instructions and, in particular, no liability is assumed for damages which result from incorrect repair or maintenance.

Copyright

All rights to these instructions and its annexes are held by ROCKINGER.

Emphasis in the text

Legend

In the interests of readability and clarity, different types of information are marked accordingly.

Sentences starting with an arrow contain instructions on how to proceed:

- Always carry out the instructions successively in the order given.

The following information is introduced by a dash:

- lists
- conditions for the subsequently described actions
- descriptions of preceding work steps
- descriptions of statuses

Warnings of hazards and risks

Important text passages which must always be observed are especially emphasised:



HAZARD!

Warns against direct hazards which could lead to serious injury or death.

- Provides instructions for the prevention or avoidance of hazards.

**WARNING!**

Indicates risks which could lead to serious injury or death.

- Requires safety measures to protect the persons concerned.

**CAUTION!**

Indicates risks which could lead to material damage or personal injury (minor injuries).

- Provides instructions for the prevention of damage.

Pictures

As necessary, texts are illustrated with pictures. The reference to a picture is given by a picture number in [square brackets]. Capital letters after a picture number, e.g. [12A], refer to the corresponding item in the picture.

Binding instructions**LUBRICANTS:**

- Lubricants for the previously described activity.

**TIGHTENING TORQUES:**

 
- Tightening torques for the listed bolted connections.

**Additional information**

The information symbol refers to instructions and recommendations as well as additional information.

TOOLS:

- List of the tools required for the subsequently described activities.




1. Automatic unit

Complete automatic unit

Requirements

 - Towing hitch without pressure
- Towing hitch closed




TOOLS:

- Allen key M6
- Allen key M10
- Locking washer for the indicator pin

Dismantling

- Press the hand lever [1A] slightly upwards and hold it in this position
- Pull out the indicator pin [1B] further by hand and arrest it with the locking washer [1C]
- Remove the 2 bolts [2A]
- Remove the valve [2B] with the tubes

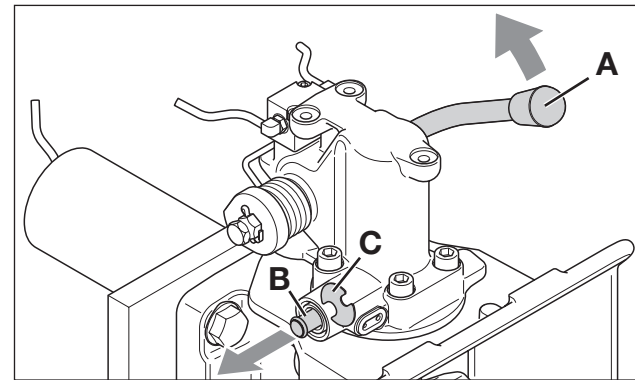

- [1] **A** Handhebel
B Anzeigebolzen
C Sicherungsblech; Teile-Nr. R0E65632



CAUTION!

Do not let any dirt get into the valve opening

- Close the opening [2C]
- Remove 4 bolts [2D]
- Pull the automatic unit up and out

Assembly

The assembly is carried out in the reverse order. The following points must be observed in particular:

- Clean the automatic unit thoroughly and grease it in the area of the hole for the coupling pin before assembly
- Note the position of the locking plate [2E]
- Observe the tightening torques
- Check the function of the towing hitch; Section 3




LUBRICANT:

- Special grease ROE96035



TIGHTENING TORQUES:

- pneumatic valve at
the automatic unit: 10 + 2 Nm
- Automatic unit at
the hitch body: 85 + 10 Nm

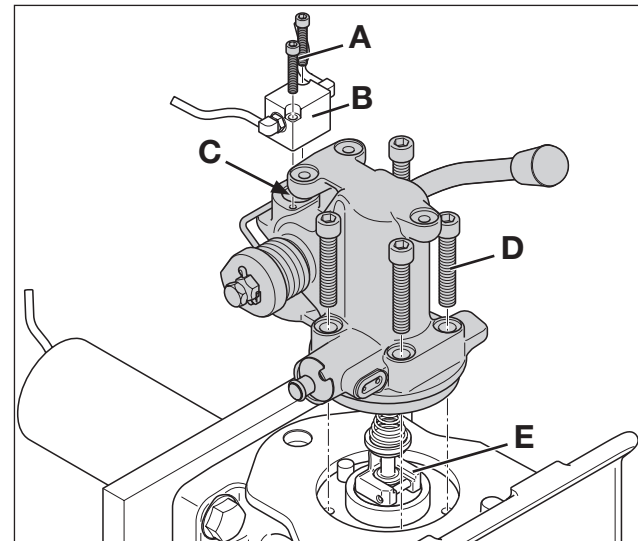

- [2] **A** Bolts
B Control valve
C Opening for pneumatic valve
D Bolts
E Locking plate

1. Automatic unit

Coupling pin

Requirements


- Automatic unit removed

Dismantling

- Pull the coupling pin [3A] up and out

Assembly

- Thoroughly clean greased parts, unless new parts and grease them:
 - inside of the automatic unit
 - automatic unit in the area of the coupling pin
 - coupling pin
 - guide bush

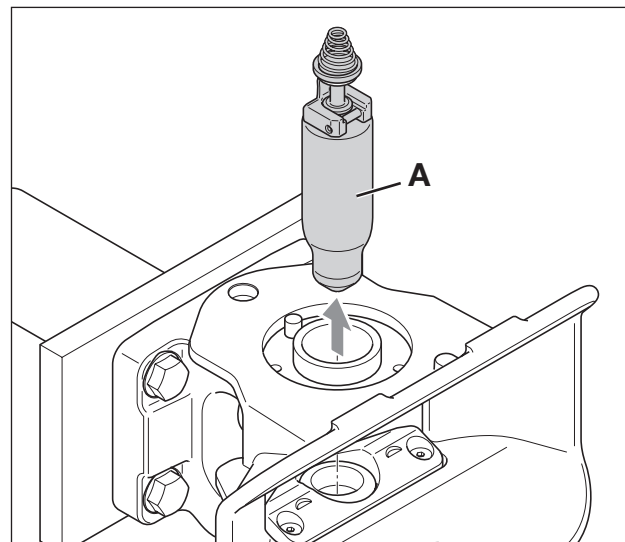


[3] A Coupling pin

- Check the coupling pin for wear before assembly unless it is a new part; Repair instructions RO *50 BNA, Section 5.3, www.jost-world.com
- Make sure the coupling pin and the locking plate [4A] are correctly positioned
- Assemble the complete automatic unit; Page 21

**LUBRICANT:**

- Special grease ROE96035

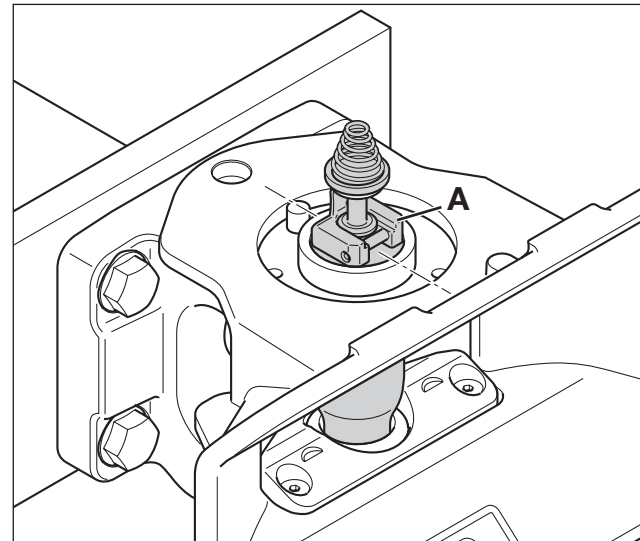


[4] A Assembly position of the coupling pin and the locking plate

2. Funnel

Support ring

Requirements

 - Release the system pressure
- Towing hitch closed



TOOLS:

- Allen key M5
- Ring or open-end spanner SW 13

Dismantling


- Release the 2 Allen bolts [5A] and 2 nuts [5B]



WARNING!

Risk of injury, the coupling pin is under high spring tension. When the towing hitch is open, do not put your hand near the coupling pin!

- Press the hand lever [6A] carefully upwards only as far as necessary to remove the support ring [6B]

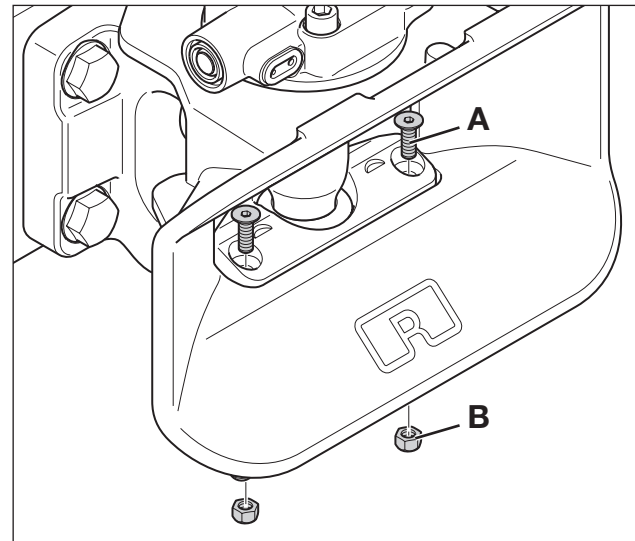


[5] A Allen bolts
B Nuts

Assembly

The assembly is carried out in the reverse order. The following points must be observed in particular:

- Thoroughly clean the mounting surfaces
- Check the support ring for wear before assembly unless it is a new part;
Repair instructions RO*50 BNA,
www.jost-world.com
- Grease the support ring
- Observe the tightening torques
- Check the function of the funnel arrest and return
- Check that the hitch is working smoothly.
As necessary, release the bolts, readjust the support ring and tighten the bolts again
- Check the function of the towing hitch;
Section 3

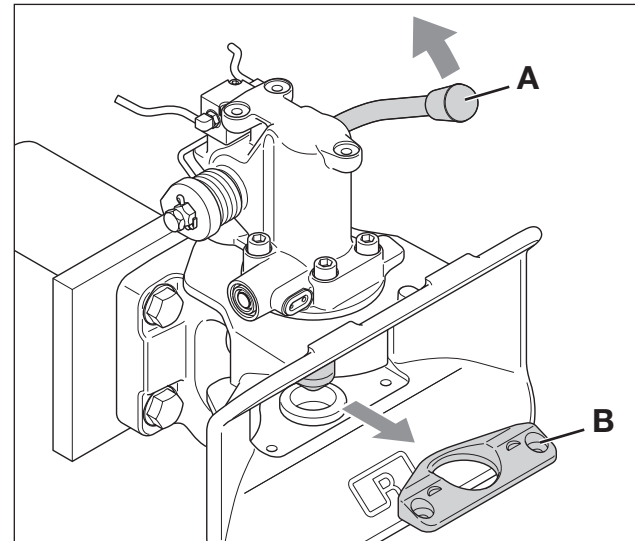


[6] A Handhebel
B Auflagering



LUBRICANT:

 - Special grease ROE96062



TIGHTENING TORQUES:

 
- Support ring to the funnel: 25 + 3 Nm

2. Funnel

Funnel reset

Requirements

- Release the system pressure
- Towing hitch closed



TOOLS:

- Spring hook
- Ring or open-end spanner SW 15




CAUTION!

Risk of injury due to spring tension.

- Wear gloves

Dismantling

- Turn the funnel to the stop to the right/left and remove the respectively released spring [7A]
- Remove the bolts [7B]
- Remove base plate [7C]

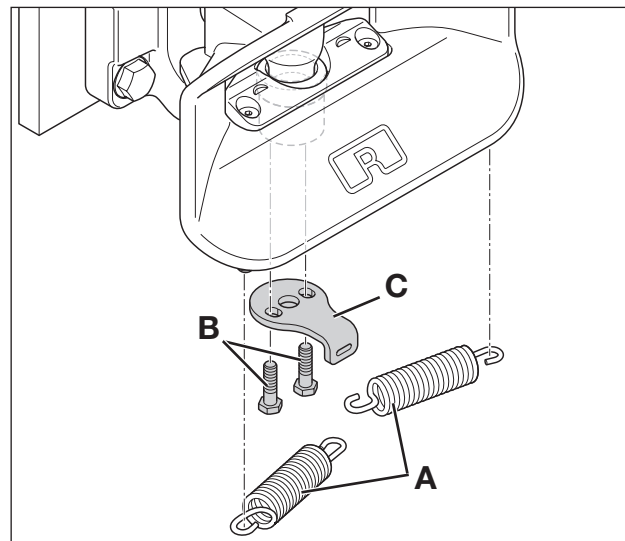

- [7] A Springs
- B Bolts
- C Base plate

Assembly

The assembly is carried out in the reverse order. The following points must be observed in particular:

- Clean the mounting surfaces before assembly
- Observe the tightening torques
- When all parts are assembled: Check the function of the towing hitch; Section 3
- Check the function of the funnel centring and arrest



TIGHTENING TORQUES:

- Funnel reset to the lower bush: 85 + 5 Nm

2. Funnel

Funnel

Requirements


- Automatic unit removed
- Coupling pin removed
- Funnel reset removed

Dismantling

- Remove the funnel [7]
- Remove the plastic sliding plate [8]


Assembly

- Clean the mounting surfaces thoroughly and grease them with special grease before assembly (supplied)
- Fit the plastic sliding plate [8]
- Fit the funnel [7]

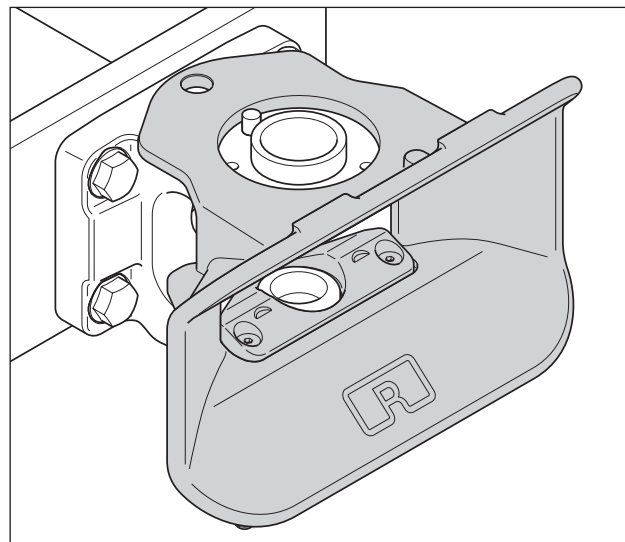


[8] Funnel

 - When all parts are assembled:
 - Check the function of the towing hitch;
Section 3
- Check the function of the funnel centring
and arrest

**LUBRICANT:**

- Special grease ROE96042

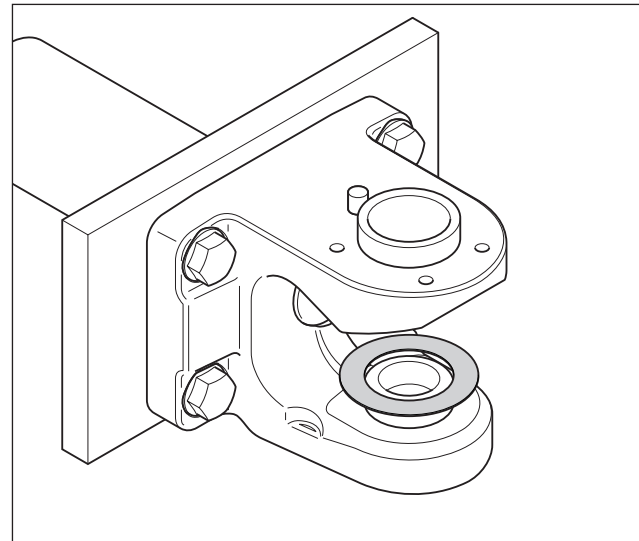

[9] Plastic sliding plate

2. Funnel


Checking the funnel centring and arrest

Procedure

- Close the towing hitch
- Press the funnel to the side
- Release the funnel
- Open the towing hitch
- Now the funnel should be arrested in the centre position!
- If not, the funnel reset must be re-adjusted at the lower guide bush;
Repair instructions RO * 50 BNA,
www.jost-world.com; Funnel reset

NOTE

For hitching the funnel must be automatically arrested in the centre position!

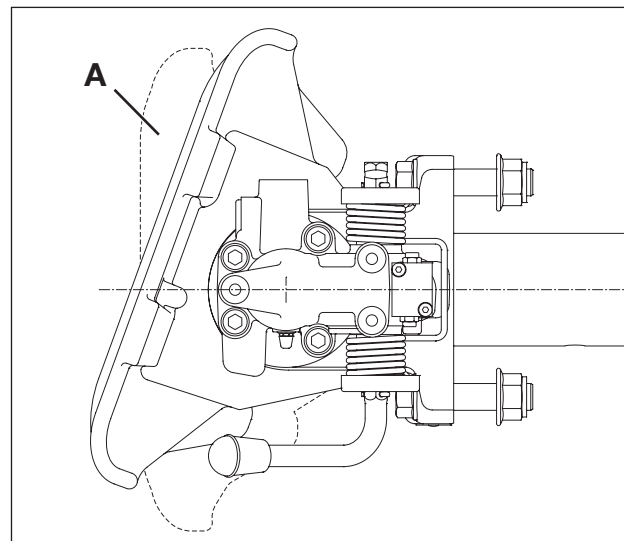

[10] A Funnel centring

3. Function test

Function test


Procedure

- Press the hand lever [11A] upwards until it engages
- The towing hitch is open. The indicator pin [11B] must now be clearly protruding (ca. 17mm)

WARNING!

Risk of injury! The coupling pin and the hand lever are now under spring tension!

- Do not put your hand anywhere near the coupling pin or the hand lever!
- Use a suitable tool to lift the coupling pin in order to trigger the closing mechanism
- The towing hitch is closed. The indicator pin [12A] must not be protruding

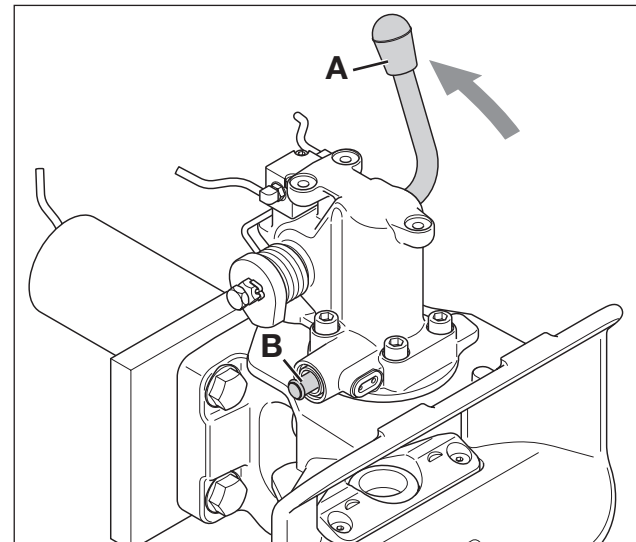


[11] A Hand lever
B Indicator pin



WARNING!

If the indicator pin is still protruding when the towing hitch is closed [11A] it is not permitted to drive with a trailer as there is a risk of accident.


- Clean the lower bush [12B]
- Replace the lock; Repair instructions RO*50 BNA, www.jost-world.com

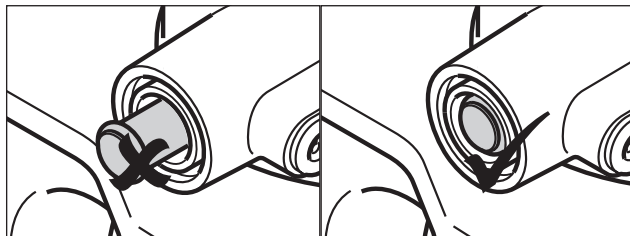

[12] **A** Wrong

Indicator pin with the towing hitch closed

[12] **B** O.K.

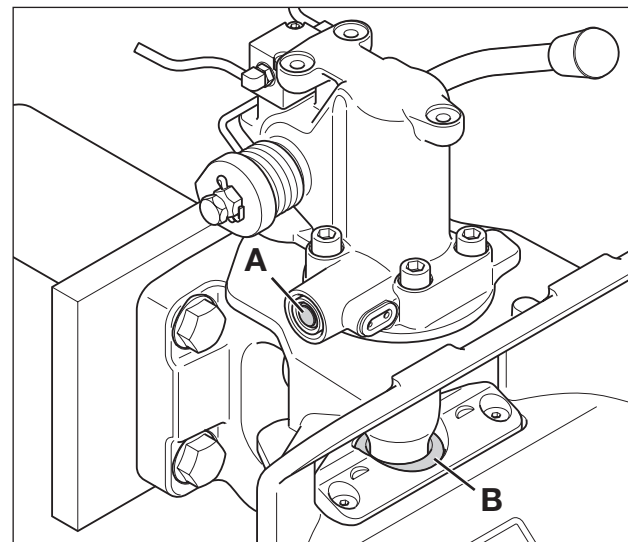

[13] **A** Indicator pin

B Lower bush



Technische Änderungen vorbehalten.
Aktuelle Informationen finden Sie unter:
www.jost-world.com

Technical modifications reserved.
For up-to-date information, please visit:
www.jost-world.com

Sous réserve de modifications techniques.
Vous trouverez des informations mises à
jour sur le site : www.jost-world.com

Techniczne zmiany zastrzeżone.
Aktualne informacje można uzyskać na:
www.jost-world.com

JOST-Werke
Siemensstr. 2
D-63263 Neu-Isenburg
Telefon +49(0)61 02295- 0
Fax +49(0)61 02295-298
www.jost-world.com